NANLITE


INSTRUCTION

pico


How to update the firmware of pico via NANLINK APP

(Using the PavoSlim 60B as an example)


1. Connect the fixture to the APP via Bluetooth and make sure that is connected successfully.

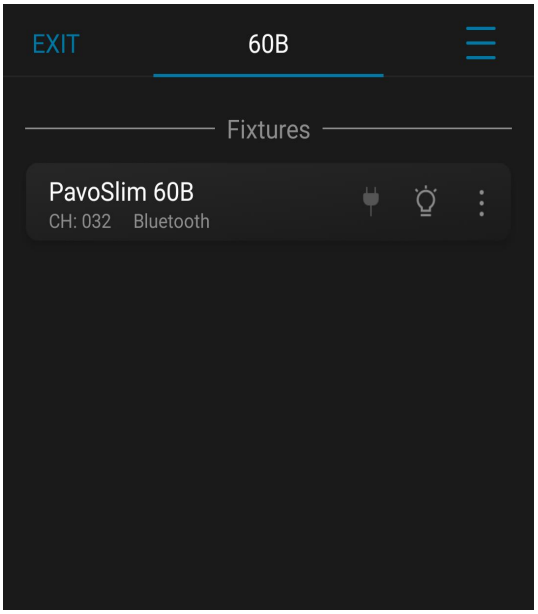


2. Click "Settings" and then enter the "Firmware Update".

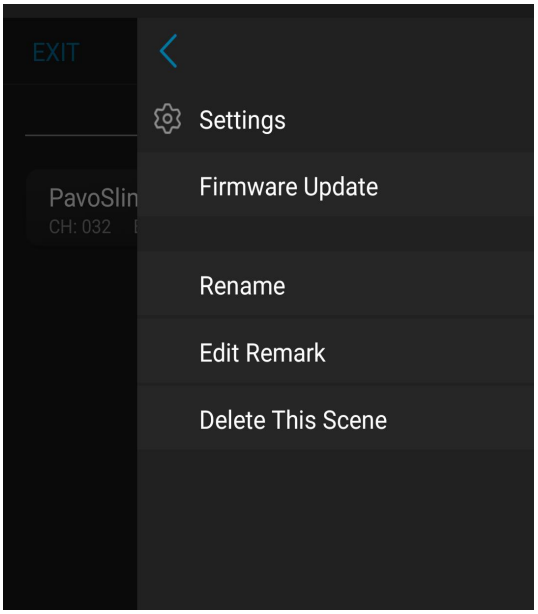


3. Wait for the "Checking Firmware" to complete.

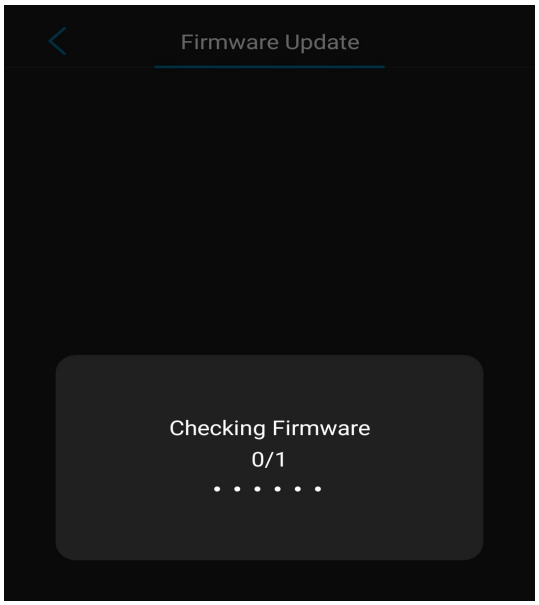

4. Select the firmware to update.

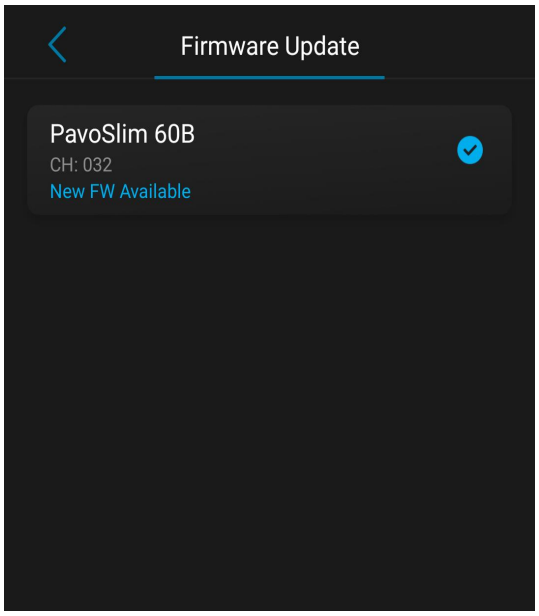


5. The fixture will restart automatically after the update is completed.

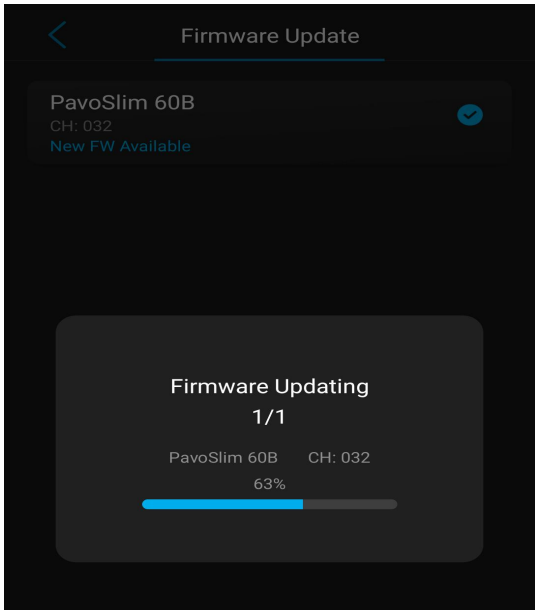


Precautions:

1. It's normal that the APP prompts "Firmware Update Finished" but the fixture is still in "Firmware Updating". Because the fixture also needs to process the firmware data, just wait for the fixture update to be completed and automatically restart, no other operations are required. After a successful upgrade, the fixture will display "Updated" until any button is pressed or any knob is rotated, then it will return to the normal interface.
2. If it prompts "Disconnected", please confirm whether the fixture is successfully connected. Try whether the lighting control is normal, if it is confirmed that it is connected, go back and try again.

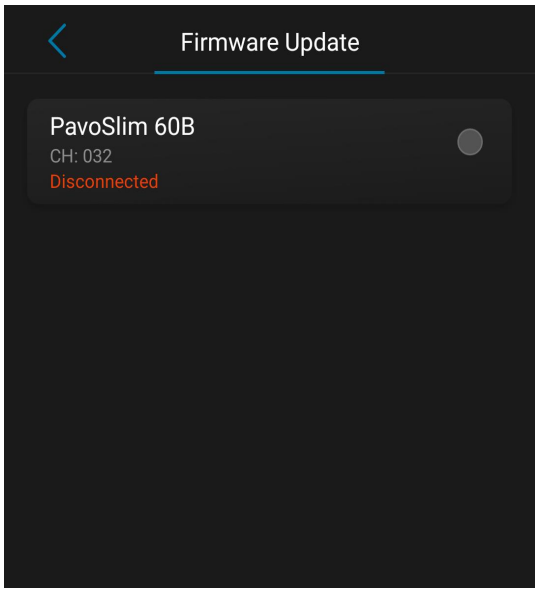

3. If it prompts "The current FW on this fixture doesn't support FW update via app, please use USB drive to complete this update", please check whether the fixture version supports firmware update via APP. If not, use a USB drive to update to the supported version. If it does, go back and try again.

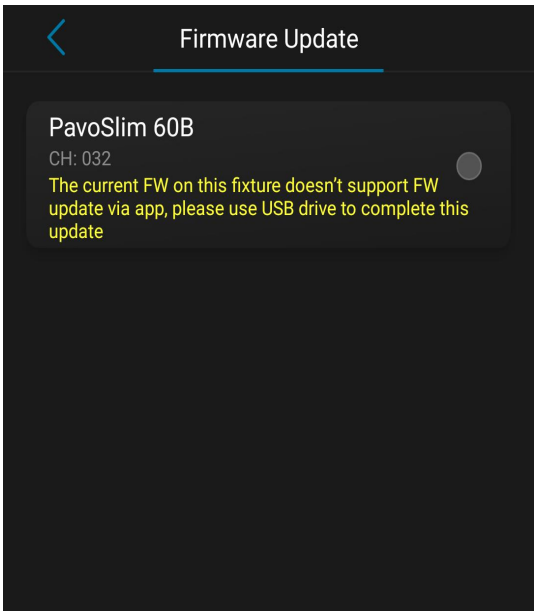

4. If the fixture displays "Failed Please retry on the APP", please repeat the above process and initiate the firmware upgrade again via the APP.